



CHANGING YOUR KEGS



AS SOON AS BEER FLOW DROPS OFF AT THE BAR TAP, TURN OFF IMMEDIATELY



TURN OFF GAS SUPPLY TO KEG COUPLER

DISCONNECT COUPLER FROM EMPTY KEG
(KEEPING YOUR HEAD TO ONE SIDE)



ENSURE SPEAR OF NEW KEG IS FREE FROM DAMAGE




CONNECT COUPLER TO NEW KEG
(KEEPING YOUR HEAD TO ONE SIDE)




TURN GAS BACK ON

ENSURE CONNECTOR IS SEATED CORRECTLY AND THERE ARE NO GAS OR BEER LEAKS

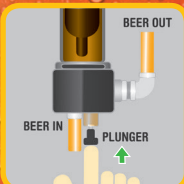

BLEED FOB DETECTOR TO REMOVE AIR LOCK

ENSURE FLOAT IN FOB DETECTOR IS FREE BY PUSHING THE PLUNGER UP AND DOWN

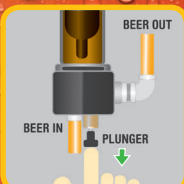

PLUNGER MUST FINISH IN THE DOWN POSITION. CHECK BEER FLOW AT BAR TAP



DELIVERING GREAT BEER TOGETHER

